 




SLX-01AL Mini Alarm Sensor Manual

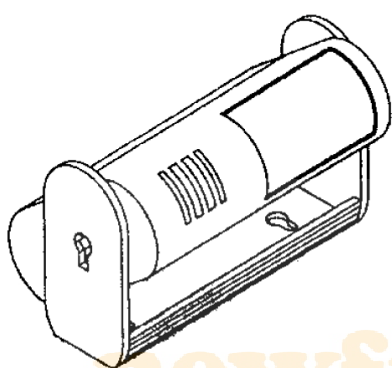

GENERAL :

Welcome to using SLX-01AL Mini Alarm Sensor.

The product is a compact, portable or wall mounted unit, which requires no wiring. It adopts high sensitivity detector, integrated circuit and SMT technology; It gathers automatic, convenient, safety and practical function.

It will alarm when a person crosses its detection field. When setting to Chime mode, it will start the sound system (dingdong door bell) to call attention that person enters detection fields. Or when it is set to Alarm model, the unit acts as an burglar alarm.

A 100% DIY product which is only require your effort to put in a

battery and it starts operating.

Ideal place to install is at entrances. Get a unit to try today for your offices/shops/home. Day time you use this to alert you that visitors or customers is visiting you. At night time or while you are away either off duty or traveling time, this Alarm sensor will alarm when intruders.

SPECIFICATIONS:

▶	Battery Powered : DC9V
▶	Detecting distance: 6m (max)
▶	Detecting angle: 60°
▶	Operating temperature: -10~40℃
▶	Relative humidity: <90%RH
▶	Detecting moving speed: 0.6~1.5m/s
▶	Alarm loudness: Approx. 60db
▶	Alarm time-delay: Approx. 15sec
▶	Suitable for Indoor Used only
▶	Switch Function: Alarm / Chime / Off


FUNCTION:

- Providing most reliable monitor through day and night;
- It has 2 functions and give the user 2 information : Chime (dingdong) and alarm
- Battery powered and no wiring required
- Easy installation, it can be fastened with screw or double-faced glue
- Or portable, and just place it in a stable location.
- Its degree can be adjusted freely after installation and the range is wide




INSTALLATION & TEST: (see following diagrams)

- Set the switch OFF, Remove the battery cover and insert a DC 9V cascading batteries into battery compartment.
- Slide the switch to open state, the unit will alarm, after 20~30s it stops, that indicates it is normal, The switch position: OFF\L(low sound)\H(high sound)
- You can either position the unit in a stable place. Or insert it into the bracket installed on the wall with screws and mount it.
- Twist or Open both sides (support bracket and body) gently. Take out the sensor body
- Open the battery lid on the sensor, put DC9V battery on it and then wait for 30s, then it is ready to be used.
- Switch function:
 - ALARM:** It will be 10s time-delay if you turn "OFF" to "ALARM". Meaning, it will not alarm within 10s even if there is a detection signal. After 10s of warm up time, then it will operate/alarm when you trigger it.
 - OFF:** The sensor will not work.
 - CHIME:** It will be 10s time-delay if you turn "OFF" to "CHIME". Meaning, it will not alarm within 10s even if there is a detection signal. After 10s of warm up time, then it will operate/Chime when you trigger it.
- Adjusting the bracket, let its field of view aim at the region to be detected. The moving person have to cross the sensing fingers of the field of view (Note : See the following detection diagram);

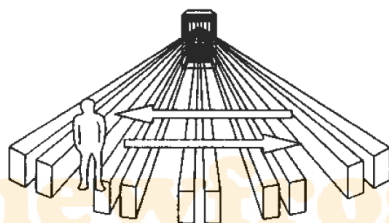

DETECTION OF MOVEMENT
(Left to Right)

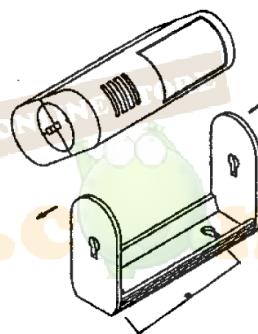

SUPPORT BRACKET& BODY

NOTE :

- The unit should be checked by walking test periodically to assure proper operation. If the unit does not work properly, please replace the batteries and retest the unit.
- Remove the batteries when NOT IN USE for a long period of time.
- Shall not block between the unit and desired area of detection
- The unit and its detection area should not be exposed to direct sunlight, electric fans, etc.
- The interval between the first induction and next induction should be 5sec
- Please don't hit the sensor and detection windows with hard or rough object
- Please don't install the sensor in the sunlight, raining and high humidity zone; near heat zone.
- This model is not formal alarm and it has limited alarm loudness. If you need higher alarm loudness, please check other of our Sensor Alarm Models.

Interested dealers, please contact .:



CG Com Trading, Krystal Point Corporate Park II, Unit 1-3-6, 3rd Floor, Lebuh Bukit Kecil 6, 11900, Bayan Lepas, Penang
Tel : +604-6402868 Fax : +604-6402866
Website : www.akiba-accessories.com